


## 24 Position control – series SERS


The stepping motor position control series SERS controls 2-phases stepping motors. A unit consists of a power amplifier, a microstepping power amplifier control and the position control. The communication with the position control is via an interface RS232C/V24, RS485, Profibus-DP, PROFIdrive, CANopen (DSP 402).

The SERS guarantees an optimal, free of vibrations true running due to its microstepping operation with 12800 steps/revolution and the possibility to select different phase current characteristics to match the characteristics of the used stepping motor type. The rough step by step operation of conventional stepping motor drives at low speed ranges has been improved extremely by the SERS to a very smooth running (comparable with servo motors). In standard version the SERS can be operated in four different modes:


### Serial operation

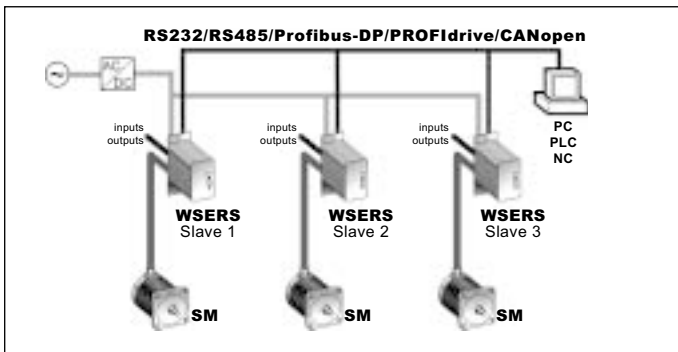


Operation with PC/PLC/NC as higher order control (master) and communication via a fieldbus / serial interface with SERS-slaves

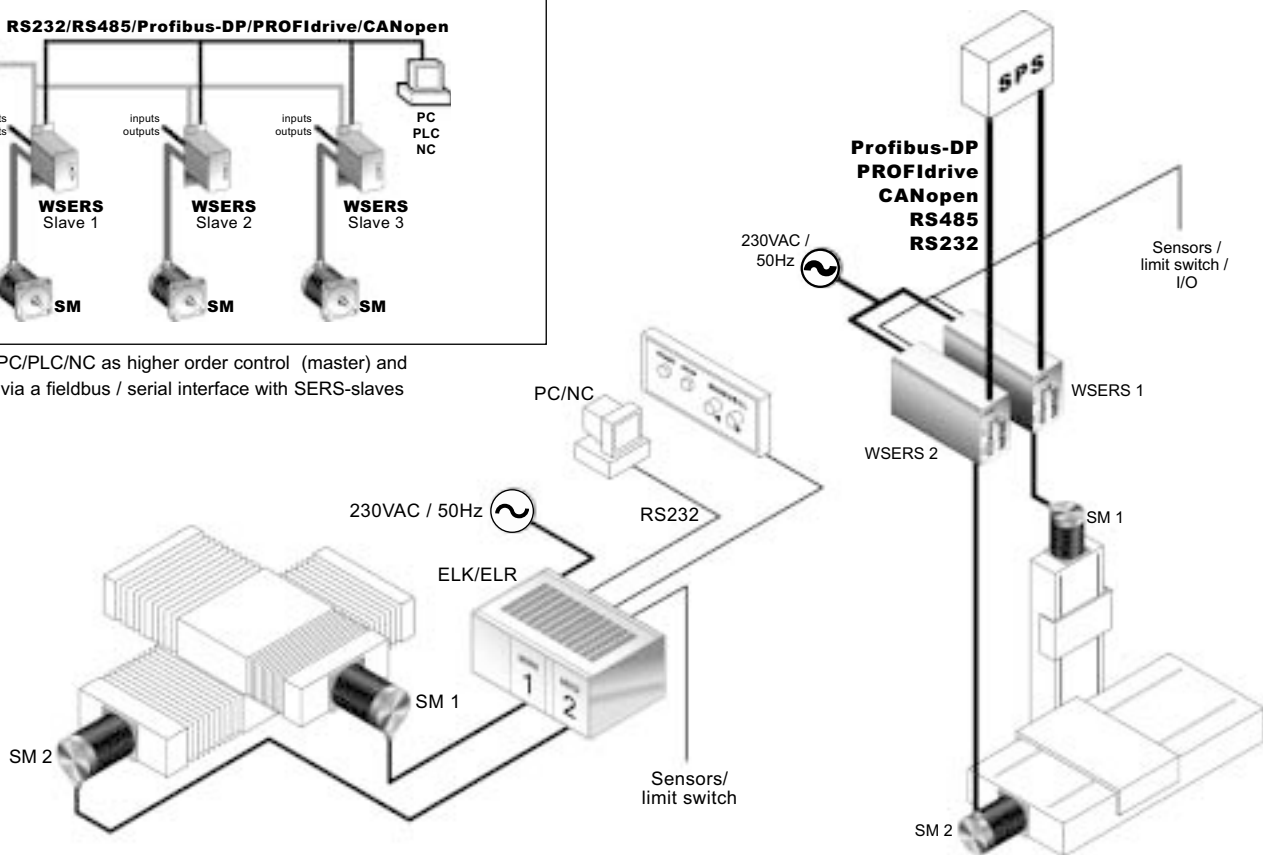


### Standalone operation

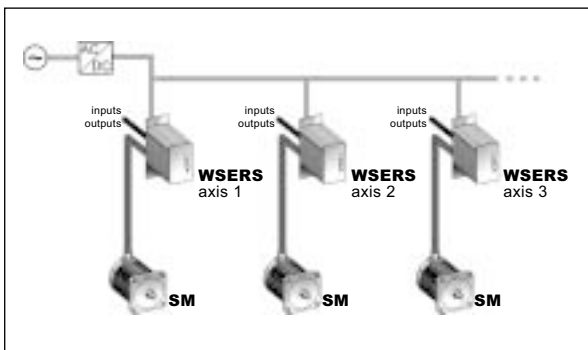

Operation with SERS-slaves as independent working axis, with stored operational programs, controlled by events at the digital inputs – e.g. manual start switch, limit switch, light barriers.

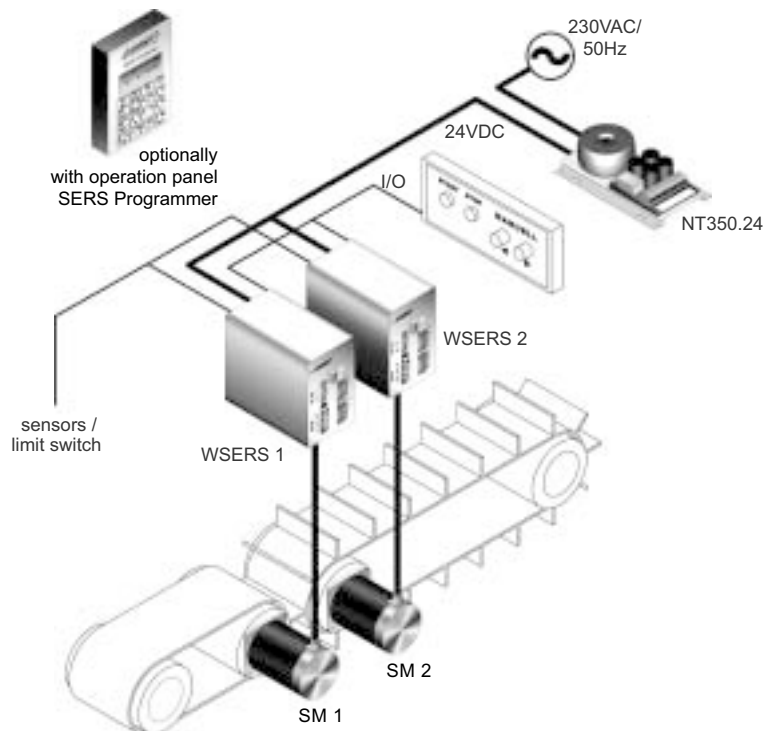


**Parallel (BCD) operation**

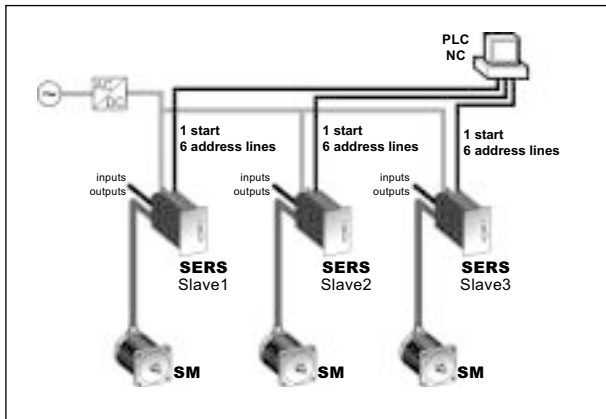



Operation with a PLC/NC or simple switches as higher order control, which call and start different operational programs in the SERS via the digital-parallel inputs (binary mode). Up to 64 different operational programs per SERS can be called.

**Master operation**

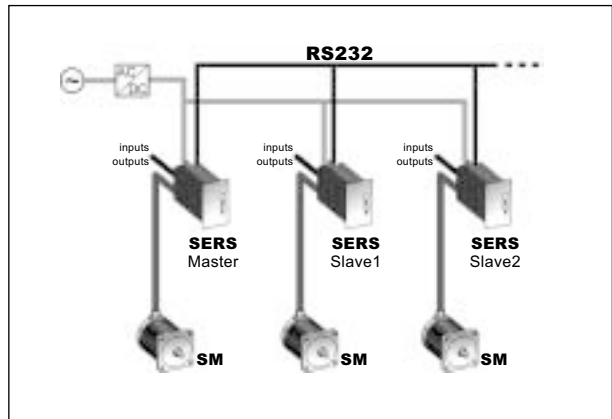

Operation with a SERS as higher order intelligent control (master), which controls other SERS-slaves via the serial interface.

**No other (higher ranking) control necessary!**

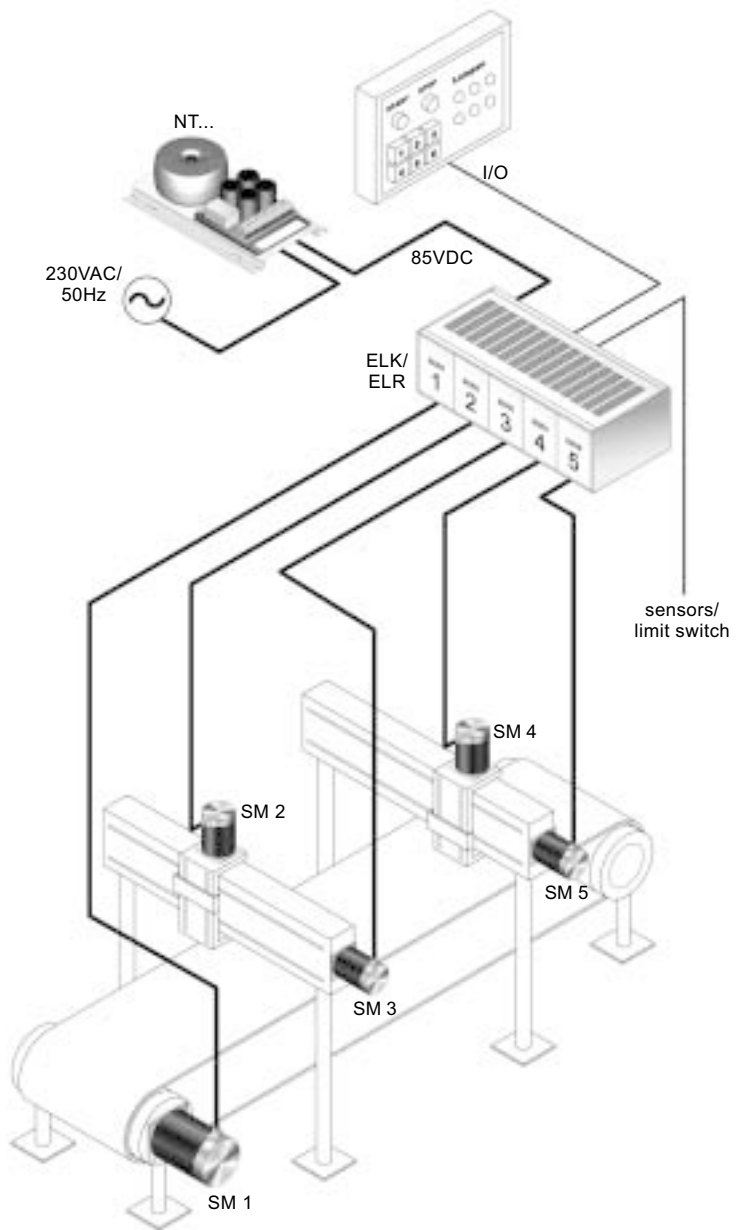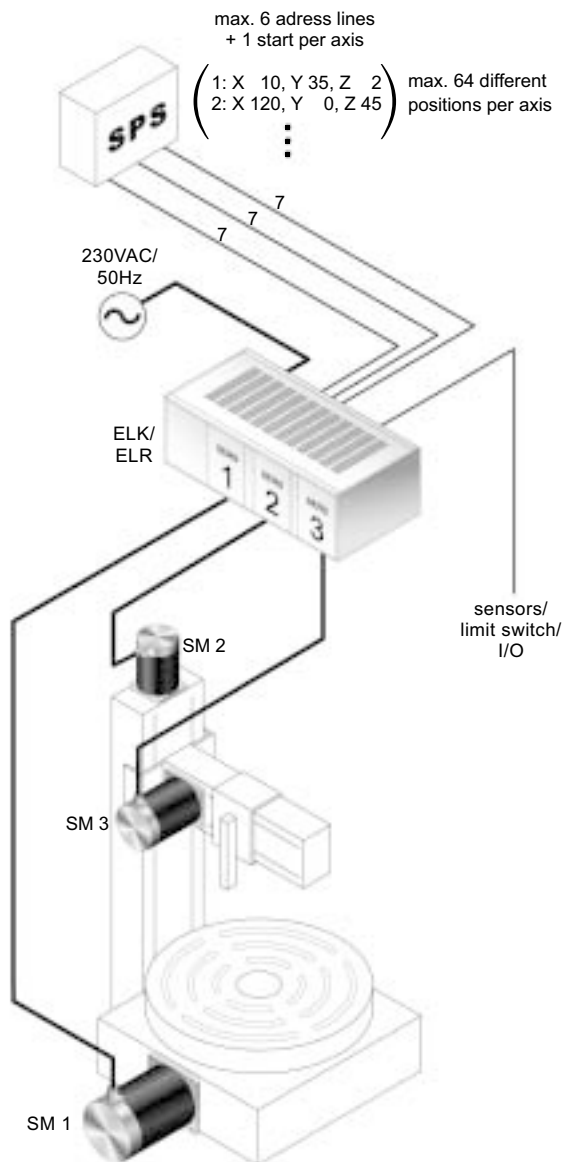

## 26 Position control – series SERS

### Overview functions and specifications:

#### Power amplifier:

- excellent truth running because of **microstepping operation at 12800 steps/revolution** and four different phase current characteristics, which can be selected for matching different stepping motor types
- **phase current programmable via interface:**

	SERS 01	SERS 02	SERS 03	SERS 06	SERS 12
max A/phase	0 to 1,4 A	0 to 2,8 A	0 to 4,2 A	0 to 8,4 A	0 to 14,5 A
- **power supply** depending on version 24 until 240 VDC
- protection against short circuit, over temperature and under voltage, additional pre-warning of temperature and under voltage

#### Inputs and outputs:

- **8 digital inputs, configurable low-/high-active (pull up or pull down input resistors), TTL (5V) or PLC (24V) – signal level**
- **2 limit switch inputs and 1 home switch input and 1 STOP switch input** – optoisolated for 24VDC signal level
- **4 digital outputs**, each max. 500 mA / 24VDC – optoisolated for external 24VDC supply and protected against short circuit
- **1 potential free output** – relay max. 100mA / 24VDC – usable e.g. as ready signal
- **1 analogue input** – 8 Bit, 0 to 5VDC
- Optional I/O – **extension: additional 8 digital inputs and 12 outputs** (each max. 100mA / 24VDC)

#### Optionally step angle control / connection of hand wheel / electrical gearing function

- **control of motor step angle**, together with a two channel encoder (signals A, A, B, B) mounted on the motor – 5VDC or 24VDC encoders
- **closed position loop** – lost steps (because of mechanical overload at motor) can be corrected – encoder controls real motor position
- connection of a **hand wheel** (with two channel encoder signals), via the optionally encoder evaluation logic or via two digital standard inputs

#### Interface:

- **RS232C/V24 (standard-PC COM-interface)**, with or without hardware handshake (selectable by software), **RS485, Profibus-DP/V0, PROFIdrive or CANopen**
- via DIP-switch adjustable baudrate from 2400 to 38400 Baud (RS232 and RS485) and drive adress from 0 to 127 Profibus with baud rate until 12 Mbaud (a GSD-file is provided), CANopen with baud rate until 1 Mbaud (EDS file provided)

#### Structural shape and connections:

- euro card format (100x160), front panel and 32 pole connector (DIN 41612) for mounting into 3 HE 19 inch systems e.g. ELK-/ELR-systems – see pages 17 until 21)
- motor leads, power supply, connections for limit and home switches via 32 pole connector, or via screw terminals in case of using ELK / ELR – panel mount / rack – systems.
- digital inputs and outputs via 25-pole D-Sub female connector or optionally via additional 32 pole connector (DIN 41612) – in case of using an ELR rack system and the SERS with additional 32 pole connector, the I/Os can be connected via spring terminals
- interface via 9-pole D-Sub connector or optionally via 32 pole connector (DIN 41612) – when using ELR racks via spring terminals

#### Position control:

- **communication** by sending and receiving **ASCII characters** via the interface (for RS232 and RS485)
- simple and easy understandable syntax for all standard commands and parameters (see table on next page)
- programming of operational programmes similar to BASIC
- **3 different kinds of scaling** selectable for all position, speed and acceleration dates (**incremental** e.g. 5000 steps, **rotational** e.g. 1000 rpm and **linear** e.g. 20 mm/min)
- Velocities from 0,12 until 10000 rpm (stepping motor usable until max. 1000 – 4000 rpm, depending on motor and supply)
- acceleration from 2 until 15600 U/s<sup>2</sup> and linear, exponential or sinus acceleration characteristics
- **2 KByte E<sup>2</sup>Prom-memory** (depending on program up to **300 lines**, optionally **8 KByte** for up to 1200 lines) for storing an operational program in standalone mode and master-slave mode, or for storing programs in the parallel mode
- backlash function for using e.g. gear heads, or spindles with backlash
- arithmetical operations: +, -, \*, /, AND, OR, EXCL-OR, NOT, NEG – usable with alle SERS parameters  
1 accumulator for calculating and 6 free usable registers
- all SERS parameters can be programmed and changed anytime in an operational program
- more functions for an operational program: program jumps, »if« command (e.g. for executing commands depending on inputs or drive status), delay function, counters (e.g. for creating loops), subroutines, and many more...
- parameters gear factor and feeding constant for linear value assignement of position, speed and acceleration
- positioning with velocity profiles = positioning with different velocities within the positioning operation
- manual drive functions – hand control (jog) via the digital inputs or commands via the interface – with variable velocity
- diagnostics – all errors and warnings can be requested any time via the interface
- selection of language for the communication with the SERS (e.g. error messages and parameter designations) – german or english

## Programming a SERS with RS232-interface via a PC or the SERS-Programmer

### Software for programming a SERS with RS232 via a PC:

For SERS with RS232 interface a free programming software in DOS-version and Windows version (Win95 / 98 / NT / 2000 / XP) is provided via CD and can be downloaded from the internet.

Additionally to the manual (pdf-file on CD) an online help (windows help file) with explanations of most of the SERS-functions is included in the delivery of a SERS.

When opening the online help during running the programming software, the corresponding explanations will be displayed directly.

SERS programming-software (Win95 / 98 / ME / NT / 2000 / XP / VISTA)  
included in standard version



### Typical standard commands in the serial operation mode:

ON	switch on motor current
OFF	switch off motor current
V=1000	set motor velocity to 1000 (depending on adjusted scaling – e.g. rotational 1000 rpm)
W=100	set position command value to 100 – e.g. 100 mm in case of linear scaling absolute position in case of absolute positioning or distance in case of relative positioning mode
E	start positioning / execute positioning job – the drive starts positioning to the set position command value
S	Stop
POS?	request to the SERS, if the motor reached it's position – the SERS will return »POS = 0« oder »POS = 1«

### Example operational program (e.g. standalone mode)

1: L1	program label L1 (program label for jump commands)
2: WAIT I1=1	wait until input I1 is set
3: O1=0	output O1=0
4: W=55 E	position command value = 55 and start positioning (»E = execute«)
5: W=10	position = 10
6: IF I2=0 E	if input I2 is not set, then start positioning
7: O1=1	output O1=1
8: GOTO 1	jump to program label L1 (here at line 1)

### SERS-Programmer:

- Low cost programming device – e.g. in case no PC is available
- Easy to use operation panel e.g. for changing parameters or program lines at a production machine

### Special characteristics of the SERS-Programmer:

- The key pad with integrated display is an optimal solution especially for dirty environments (front side of the SERS Programmer is IP 65)
- The 3 different key levels are clearly marked by colors
- Possibility to lock or enable certain parameters and program lines via a password
- Any text to be displayed with the parameters to be changed can be defined

The SERS Programmer is available with housing as external programming device, or for integrating into 19 inch systems ( e.g. ELK-racks ) or into any kind of front panel.



**SERS Programmer**  
as external programming device  
with closed PVC housing



**SERS Programmer R**  
for integrating into any front panel  
or 3-HE racks  
(e.g. ELK/ELR systems)

## 28 Position control – series SERS





### Option **E50 encoder connection**

The SERS-stepping motor control is available optionally with encoder input (SERS...V04 E50).

2-channel encoders ( A, B and  $\bar{A}$ ,  $\bar{B}$  ) with any resolution (e.g. 2 x 50 impulses/rev. or 2 x 1000 impulses/rev.) can be connected.

The SERS... V04 E50 includes 2 different encoder signal inputs:

- **Encoder input 1** (9-pole D-Sub female connector at the SERS-front panel):  
The signals are evaluated 4 times (with recognition of direction). Out of the signals of e.g. a 1000 pulse encoder there are created 4000 increments. The signals pass a RS422-input circuit and analogue and digital filters. This guarantees a very high level of noise immunity. The encoder input can be used for the control of step angle (with complete correction of lost steps after a mechanical overload at the motor – correction of actual position or driving to the target position with lower velocity) or for connecting a hand wheel or another motor (with encoder output) for realizing an electrical gearing function.
- **Encoder input 2** (inputs I3 and I4 of the digital inputs):  
Signals A and B are evaluated 4-times (no evaluation of the inverted signals). This encoder input can be used for realizing a hand wheel function respective an electrical gearing function.

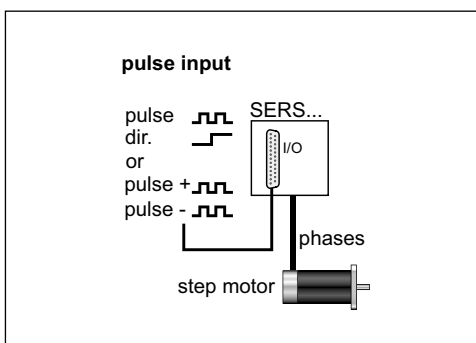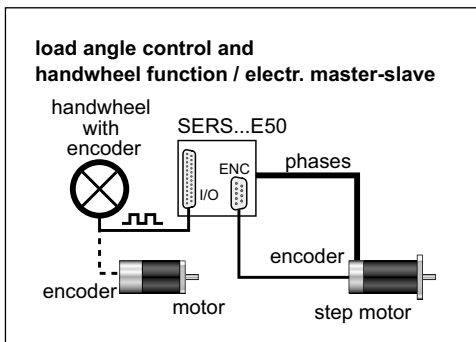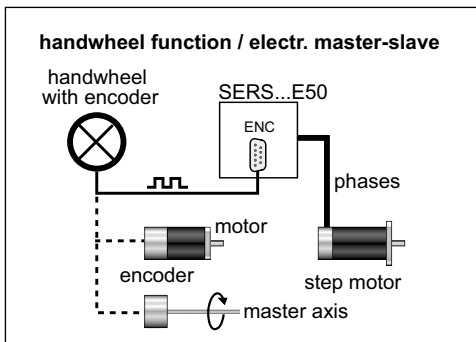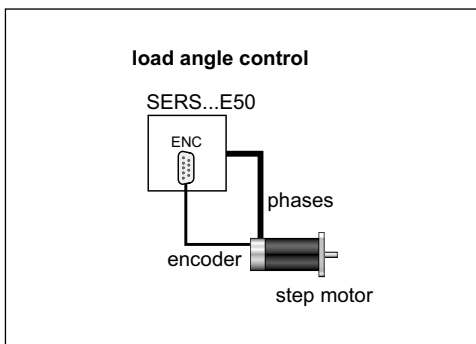

### Control of load angle

The signals of an encoder mounted at the stepping motor are connected to the SERS. The SERS compares the position created by the encoder signals with the internal actual position command value.

If the difference between both values is too big (difference value adjustable), then an error message (or warning – selectable) will be created and the motor will immediately decelerate until stop (if error is preselected).

### Correction of position (closed loop)

After a load angle error the lost steps can be corrected (driving with homing velocity to the position command value / target position) or the position command value is set to the real actual motor position (given by the encoder).

### Hand wheel function / electrical gearing (master-slave) function

The signals of a hand wheel or the signals of an encoder mounted on any other shaft are connected to the SERS. The SERS (respective the motor controlled by the SERS) follows these encoder signals. The relation between the number of encoder signals (movement of the handwheel / other motor / shaft) and the movement of the stepping motor (controlled by the SERS) can be adjusted.


### Pulse input

Encoder input 1 and encoder input 2 also may be used as pulse inputs. There are two possibilities:


1. Signal pulse and signal direction
2. Signal pulse in positive direction and signal pulse in negative direction

The movement (distance) related to one pulse can be selected via a parameter in the SERS. In case of a pulse chain with high frequency without ramp the pulses will be buffered in the SERS and the SERS creates the ramp with the preselected parameters acceleration »a« and maximum velocity »v«.

**SERS block diagram**

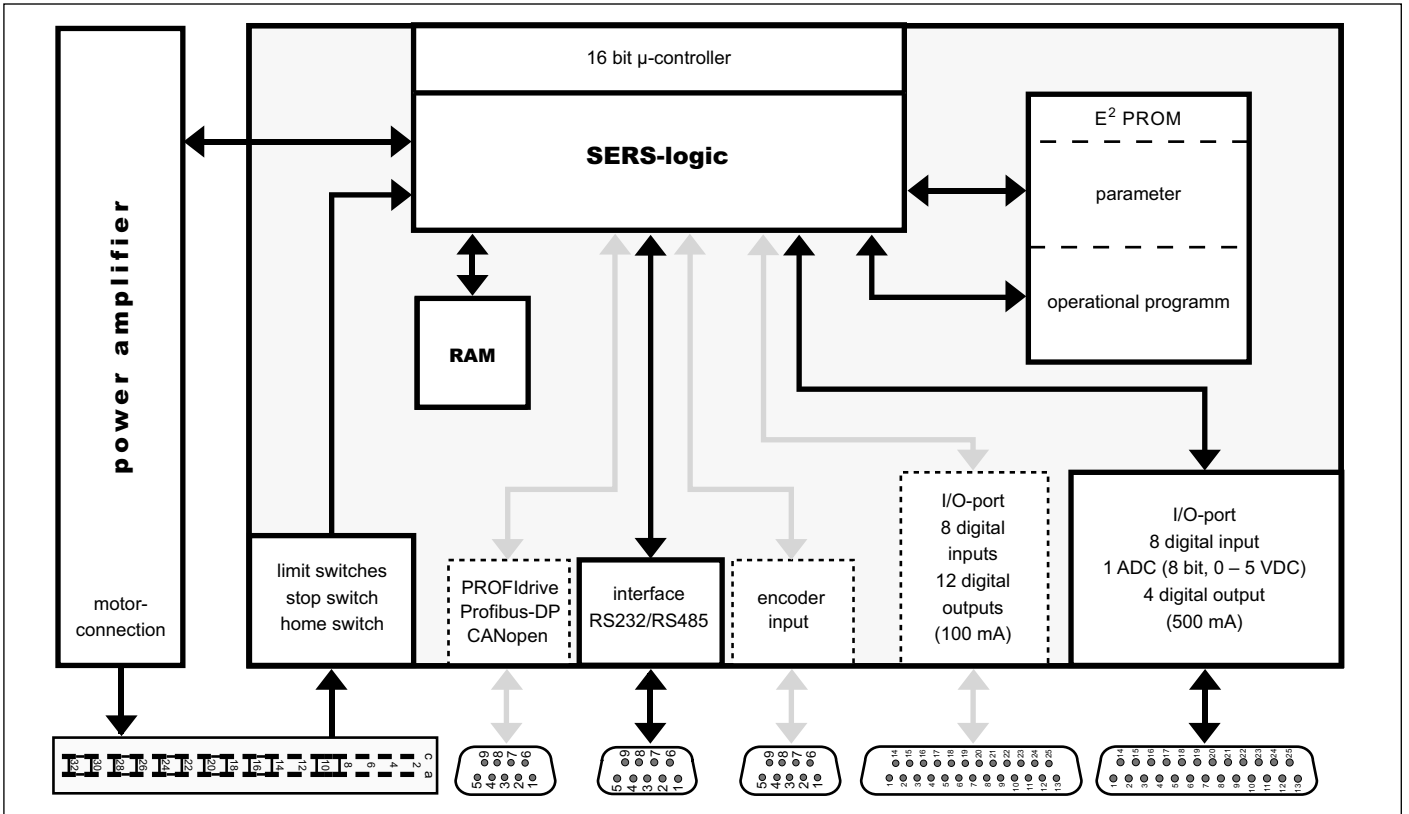

**SERS with seperated 24VDC logic supply – option »U«:**

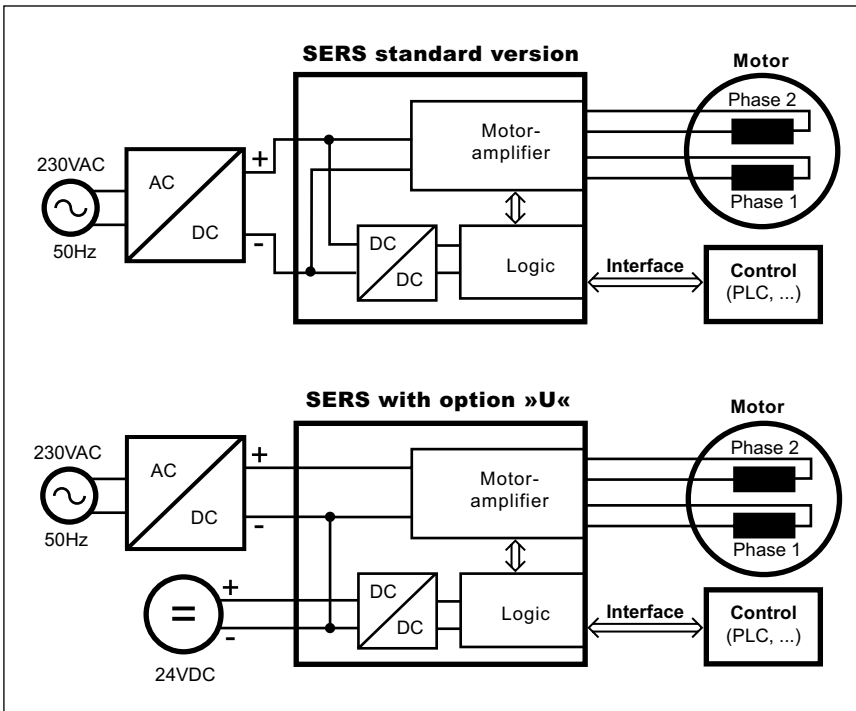

**SERS standard version:**

The SERS unit is supplied by a common voltage supply. In case of switching off this common power supply the motor power is switched off as well as the logic (position control unit in the SERS) and the interface of the SERS.

**SERS with option »U«:**

The SERS is supplied by two separate voltage systems

- the motor (amplifier) is supplied by the main power supply
- the logic (position control with interface) is supplied by separate 24VDC

In case of needing to switch off the motor power (e.g. for safety reasons) the logic still can be supplied by 24VDC and therefore it still can be active (in operation).

This version may be used e.g. for keeping alive the interface (e.g. Profibus or CANopen) and its communication.

The separate logic supply is externally via the input »service switch external« by +24VDC. The 0V (Minus) of the 24V is connected to the common GND of the SERS respective GND (24V) at ELK-racks and GND (VCC) at ELR-racks (ELK-racks must be ordered with the Option »V«).

A SERS with separated 24VDC logic supply input must be ordered with the option »U« (see ordering key at page 32).

# 30 Position control – series SERS

## SERS with Profibus-DP/V0 interface

<b>Output</b>	control word (4 byte)	opcode (2 byte)	operand (4 byte)	acceleration (4 byte)	velocity (4 byte)	position / travel (4 byte)
<b>Input</b>	status word (2 byte)	result of parameter value request (4 byte)	actual position (4 byte)	digital inputs (2 byte)		
<b>Diagnostics</b>	error (2 byte)	warning (2 byte)	error no. (1 byte – code for more than 100 detailed error messages)			

### Control Word

the control word triggers below actions after being changed. »STOP« will be evaluated always.

**Bit 0:** SLOW\_NEGATIVE (jog 1 = active, 0 = Stop)

**Bit 2:** FAST\_NEGATIVE (jog 1 = active, 0 = Stop)

**Bit 4:** HOMING (1 = active, 0 = Stop)

**Bit 6:** STOP (1 = stop active, 0 = moving enabled)

**Bit 8:** START\_POSITIONING (edge 0 to 1 = start)

**Bit 13:** RESET\_ERROR (edge 0 to 1: P11=0)

**Bit 15:** EXECUTE\_OPCODE (edge 0 to 1 = »opcode« will be executed)

**Bit 16:** START\_POSITIONING\_TOGGLE (at change of this bit will start the drive)

**Bit 17:** ABSOLUTE (positioning mode – absolute or relative)

**Bit 19:** POLYNOM\_TERM 1 = (termination of polynom / last polynom section)

**Bit 20:** PARAMETER\_ACCEPT (the parameter »acceleration«, »velocity« and »position command value« in bytes 11 until 22 will be used in case of a start positioning via the control word (bit 8 or bit 16).

**Bit 21 bis 31:** reserved

**Bit 1:** SLOW\_POSITIVE (jog 1 = active, 0 = Stop)

**Bit 3:** FAST\_POSITIVE (jog 1 = active, 0 = Stop)

**Bit 5:** PHASE\_CURRENT\_ON (1 = ON, 0 = OFF)

**Bit 7:** START\_PROGRAMM (1 = Start)

**Bit 9 bis Bit 12:** OUTPUT 1 to OUTPUT 4 (digital outputs)

**Bit 14:** RESET\_WARNING (edge 0 to 1 - P12=0)

**Bit 18:** POLYNOM 1 = (activates the polynom positioning mode)

### Operation Code and Operand

Via the Operation Code bytes and the Operand bytes any SERS parameters (e.g. motor phase current) can be set.

»Operation Code« = SERS – parameter number and »Operand« = parameter value

For setting up a parameter only the correct Operation Code and value must be written into the corresponding output bytes and Bit 15 in the control word must be set.

Even complete operational programs may be saved into the SERS by using the Operation Codes and Operands.

### Acceleration, Velocity and Position

Via the bytes acceleration, velocity and position a positioning job may be initialised directly. Via Bit 8 or Bit 15 in the Control Word the positioning job can be started. Bit 10 in the Status Word indicates if the target position is reached.

### Status Word

In the status word the complete SERS status is shown and may be read anytime from the Profibus-Master unit.

**Bit 0:** READY\_TO\_SWITCH\_ON is always 1

**Bit 2:** OPERATION\_ENABLED (phase current ON)

**Bit 4:** SETPOINT\_ACKNOWLEDGE (next Polynom section is expected)

**Bit 7:** WARNING P12 <> 0 (a warning is active)

**Bit 9:** REMOTE P0=0 (no running program active)

**Bit 11:** INTERNAL\_LIMIT\_ACTIVE (limit position overflow)

**Bit 13:** FOLLOWING\_ERROR (error load angle – only for SERS with option E50)

**Bit 14:** ACCELERATING\_PHASE (motor is accelerating)

**Bit 1:** SWITCHED\_ON P134 <> 0 (phase current is ON)

**Bit 3:** FAULT P11 <> 0 (an error is active)

**Bit 5 und Bit 6:** not used

**Bit 8:** HANDSHAKE SERS (finished last opcode execution)

**Bit 10:** TARGET\_REACHED (motor not running / position reached)

**Bit 12:** HOMING\_ATTAINED (after successful homing procedure)

**Bit 15:** CONSTANT\_PHASE (motor runs with constant velocity)

### Result of parameter value request

For requesting the actual value of any parameter, via the Operation Code a parameter request may be started.

The actual value of the requested parameter will be written into the bytes »Result of parameter value request«.

### Actual Position

The SERS writes continuously its actual position into the bytes »actual position« and can be read out at any time.

### Diagnostics

In the diagnostics section all warnings and errors are indicated detailed.

E.g. during setting up new projects this gives very detailed feedback to the software engineer programming the SERS. But also at the customers application, via the diagnostics any kind of error (e.g. short circuit at motor / amplifier, warning overtemperature amplifier, STOP switch active and therefore no movement possible, invalid value set because to big or to small, and many more detailed messages) may be monitored. Over 100 different detailed error and warning messages are indicated via an error code.

### GSD-file (Profibus configuration file)

A GSD-file is provided for an easy configuration of the SERS unit at a Profibus-DP master.

Also a complete manual (pdf-format) for the SERS with Profibus-DP drives is provided.

### SERS with Profibus-DP/V1 interface and PROFIdrive protocol V3.1:

The SERS with PROFIdrive interface follows the specifications of the PROFIdrive profile drive technology Version 3.1.

Profibus-DP/V1 (sometimes also called Profibus-DP/V2 in case of PROFIdrive) is implemented in the SERS.

The SERS drive is an application class 4 drive, where the PROFIdrive master calculates and cyclically transmits speed setpoint values and the SERS returns actual position values and status word (closed position loop control realized via the Profibus).

A clock synchronism ensures high timing precision and exact synchronising of all connected drive axis.


This enables position interpolation with high precision and speed of multiple drive axis via the Profibus.

All SERS units with PROFIdrive also support the Profibus-DP/V0 mode (described at page 28).

Specifications of the SERS with PROFIdrive

- operation with any PROFIdrive-Master (e.g. Siemens Simotion control)
- implemented operating mode: speed control mode (application class 4)
- supported cycle times: 2ms and 4ms (for other cycle times please contact STÖGRA technical support)
- status word and control word according to PROFIdrive profile 3.1

A Profibus (PROFIdrive) configuration file (GSD-file) is provided.

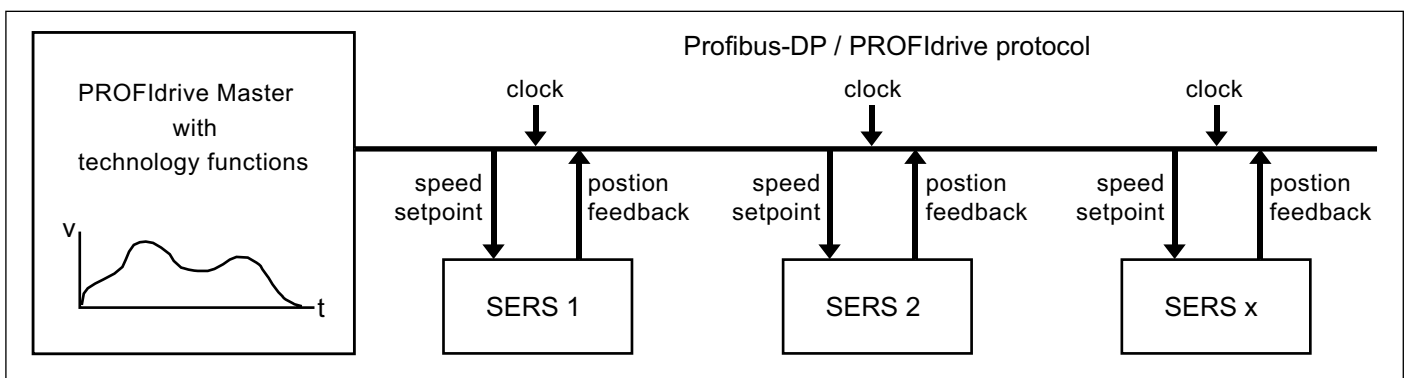

A motion profile for multiple axis (e.g. an interpolation in a 3D system with X-Y-Z axis) is given to a PROFIdrive master.

A closed position control loop via the Profibus is realised by cyclically transmitting speed setpoint values to the drives and receiving actual position values from the drives (controlled by a clock synchronism with time stamp).

For achieving the wanted position at the different axis the position feedback values are used for calculating the speed setpoint values for the next cycle.

This dynamical interpolation system also enables changing the profile at any time online, respectively generating the profile continuously (when starting the first movement, the following movements – positions and speed – are calculated online depending on any actual new events).

### SERS with CANopen interface:

SERS units with CANopen interface include following specifications:

- standard parameter of the »CANopen Device Profile for Drives and Motion Control« of Index 0x6000 are according to »CiA confirming to Draft Standard Proposal **DSP-402**«
- general (e.g. communication) parameters with index numbers until 0x1000 are implemented according to »CiA Draft Standard 301« (Application Layer and Communication Profile) from »CAN in Automation e. V.«
- 11 Bit identifier used
- implemented positioning modes ("modes\_of\_operation" (6060) ): 1 »Profile Position Mode« and 6 »Homing Mode«
- galvanically isolated CANopen interface with selectable Baudrates up to 1Mbaud
- all functions of the standard SERS with RS232 interface are implemented (see description page 22 to 27)
- EDS-file provided including reference to all manufacturer specific SERS parameter
- manual (pdf-format) provided

### Voltage supply:

Nominal voltage	24VDC	60VDC <sup>1)</sup>	85VDC	120VDC	240VDC
Voltage supply range	20 – 40VDC	45 – 70VDC	45 – 85VDC	60 – 120VDC	120 – 240VDC

<sup>1)</sup> 60VDC versions are available only for 1A, 2A and 3A SERS boards  
Also 1A, 2A and 3A SERS boards are available only with 24VDC or 60VDC

# 32 Position control – series SERS




**SERS 02.60 V04**  
 phase current: 0 to 2,8 A/Ph  
 voltage supply: 60VDC  
 – optionally SERS xx.yy V04  
 with xx = 01, 02, 03 or 04  
 (max. 1,4, 2,8, 4,2 or 5,6A/Ph)  
 and yy = 24 or 60VDC available

**SERS 06.85 V04**  
 phase current: 0 to 8,4 A/Ph  
 voltage supply: 85VDC  
 optionally SERS 06.24 V04  
 and SERS 06.120 V04  
 with 24VDC / 120VDC

**SERS 12.120 V04**  
 phase current: 0 to 14,5 A/Ph  
 voltage supply: 120VDC  
 optionally SERS 12.85 V04  
 and SERS 12.240 V04  
 with 85VDC respective 240VDC

**ELK 3.500.85/24.2**  
 SERC-controls are available also in mains ready panel mount and 19 inch systems in different sizes (see ELK-/ELR-systems pages 18 to 21).  
 Photo above: 2-axis-SERCOS panel moutage rack with 500VA power supply and internal 85VDC voltage supply.

## Dimensions

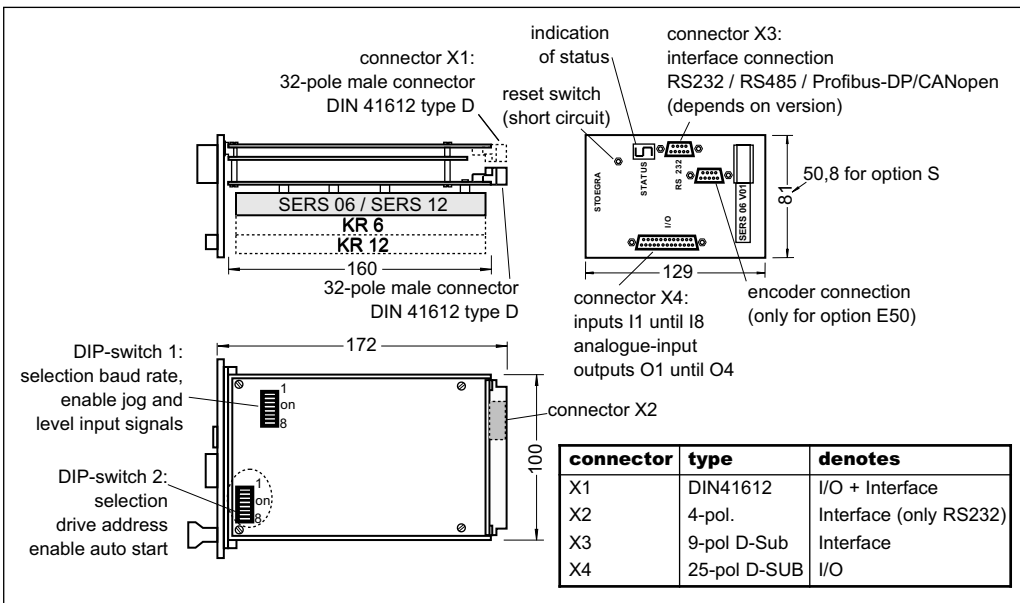

## Option H:

SERS for mounting into board holder KH-SE\_01 (see page 11) e.g. SERS 06.24 V04 H (board holder KH-SE\_01 has to be ordered separately)




For panel mount and 19 inch systems with power supply for SERS controls → see ELK/ELR page 17

## Connector options

option	X1	X2	X3	X4	description
R1	X		X		for ELR-racks – I/Os + interface via connector X1+ interface via 9-pol. D-Sub at front side
R2	X				for ELR-racks – I/Os + interface via connector X1
R3	X				for ELR-racks – I/Os + Interface via connector X1– without front panel
R4		X		X	for ELK-racks with option »I« or »I2« or »P« – interface at rear side via X2
R5		X	X	X	for ELK-racks with option »I« or »I2« or »P« – interface at front side and rear side
no indication			X	X	standard version

## Ordering key (e.g. SERS 12.120 V04 or SERS 02.24 V04 E50 S or SERS 06.85 V04 R2 K6)

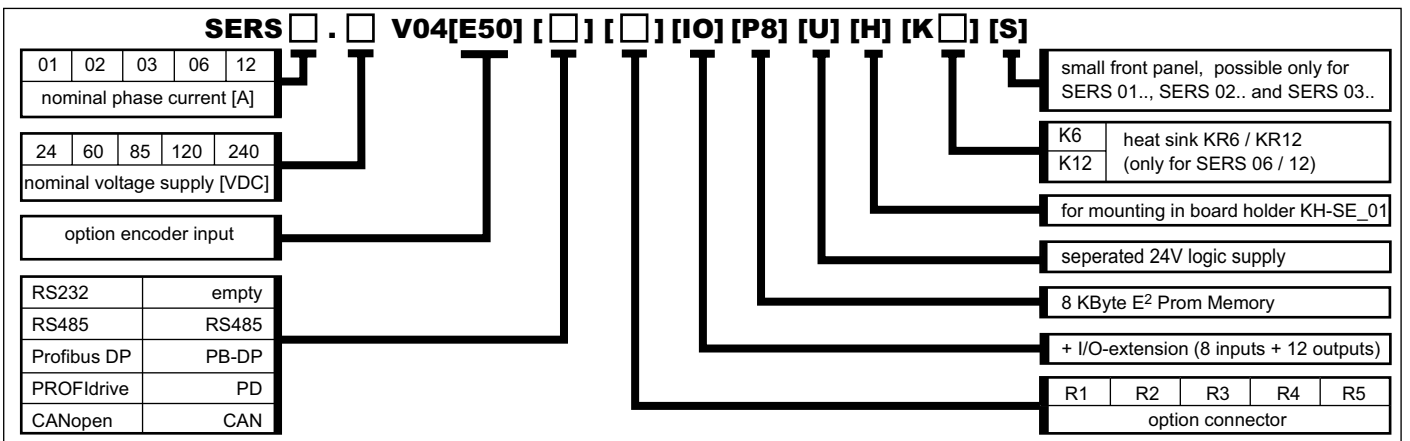

1A, 2A and 3A SERS boards only available with 24VDC or 60VDC (also 60VDC only available for 1A, 2A and 3A SERS boards)


The stepping motor position control series WSERS controls 2-phases stepping motors.

A unit consists of a power amplifier, a micro-stepping power amplifier control and the position control. The communication with the position control is via an interface RS232C/V24, RS485, Profibus-DP, PROFdrive or CANopen.

The WSERS guarantees an optimal, free of vibrations true running due to its microstepping operation with 12800 steps/revolution and the possibility to select different phase current characteristics to match the characteristics of the used stepping motor type.


The rough step by step operation of conventional stepping motor drives at low speed ranges has been improved extremely by the WSERS to a very smooth running (comparable with servo motors).

In standard version the WSERS can be operated in four different modes (see pages 24/25 – identical to series SERS).

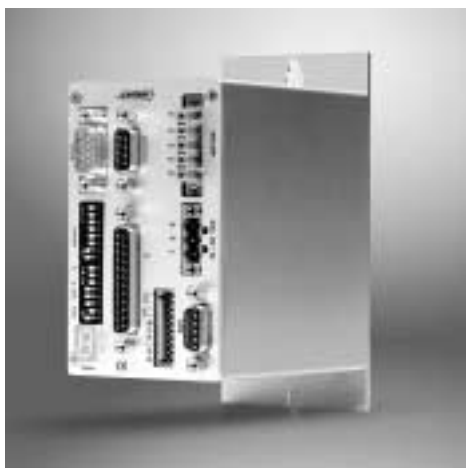


**WSERS 04.80 V01 E50 PB-DP /W**

phase current 0 to 4,2A/phase  
voltage supply 20 to 80VDC  
also available as WSERS 08.80 ...  
with 0 to 8,4A/phase

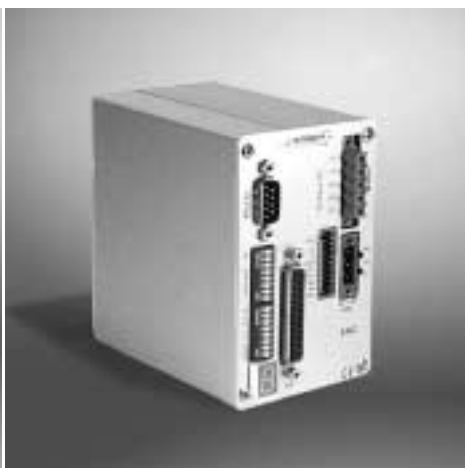

**WSERS 08.80 V01**

phase current 0 to 8,4A/phase  
voltage supply 20 to 80VDC  
also available as WSERS 04.80 ...  
with 0 to 4,2A/phase

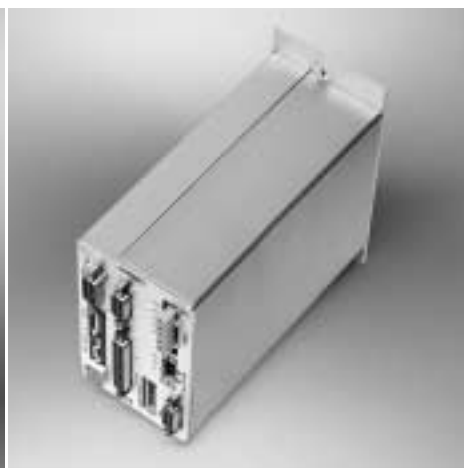

**WSERS 06.230AC V01 E50 PB-DP /W**

phase current 0 to 6,0A/phase  
voltage supply 230VAC/50-60Hz  
also available as WSERS 04.230AC ...  
with 0 to 4,2A/phase

**Functions of the WSERS:**

The functions of the WSERS are identical to the series SERS (see descriptions on pages 26 to 31):

Inputs / Outputs (for WSERS xx.115AC and WSERS xx.230AC the analogue input is an option which must be ordered extra), optional load angle control E50, interfaces (RS232, RS485, Profibus-DP, PROFdrive, CANopen), position control, option »U« (separate logic supply), programming (via software and SERS Programmer).

As the series SERS, the power amplifier stage of the WSERS includes microstepping with 12800 steps/revolution (will be switched dynamically at higher speed).

**Versions phase current and voltage supply:**

type	phase current	voltage supply	internal motor operating voltage
WSERS 04.80...	0 – 4,2A/phase	20 – 80 VDC	20 – 80 VDC
WSERS 08.80...	0 – 8,4A/phase	20 – 80 VDC	20 – 80 VDC
WSERS 04.115AC...	0 – 4,2A/phase	115VAC/50-60Hz	162VDC
WSERS 06.115AC...	0 – 6,0A/phase	115VAC/50-60Hz	162VDC
WSERS 04.230AC...	0 – 4,2A/phase	230VAC/50-60Hz	325VDC
WSERS 06.230AC...	0 – 6,0A/phase	230VAC/50-60Hz	325VDC

The versions WSERS xx.115AC and WSERS xx.230AC are for direct connection to the mains 115VAC/60Hz (e.g. USA) respectively mains 230VAC/50Hz (e.g. Germany) – see also description and diagram for series WSE ...230VAC at page 10.

The AC-voltage is converted into a DC-voltage within the WSERS, resulting in a motor operating voltage of 162VDC (at 115VAC) respectively 325VDC (at 230VAC). The WSERS xx.115AC and WSERS xx.230AC may only be operated together with motors with sufficient and special insulation (e.g. from STÖGRA all motors of series SM 88, and series SM 87 and SM 107 from production date 07.2006). The motors must be suitable for being operated with 325VDC (insulation test voltage 2000VAC 1s according to VDE530-1).


**Versions for DIN rail and panel mounting:**

The WSERS includes a closed metallic compact housing and is available in two different mounting versions:


- version for DIN rail mounting via a rear side rail mounting clip
- version for panel mounting via a rear side panel mounting bracket

# 34 WSERS – connections

## WSERS 04.80 and WSERS 08.80

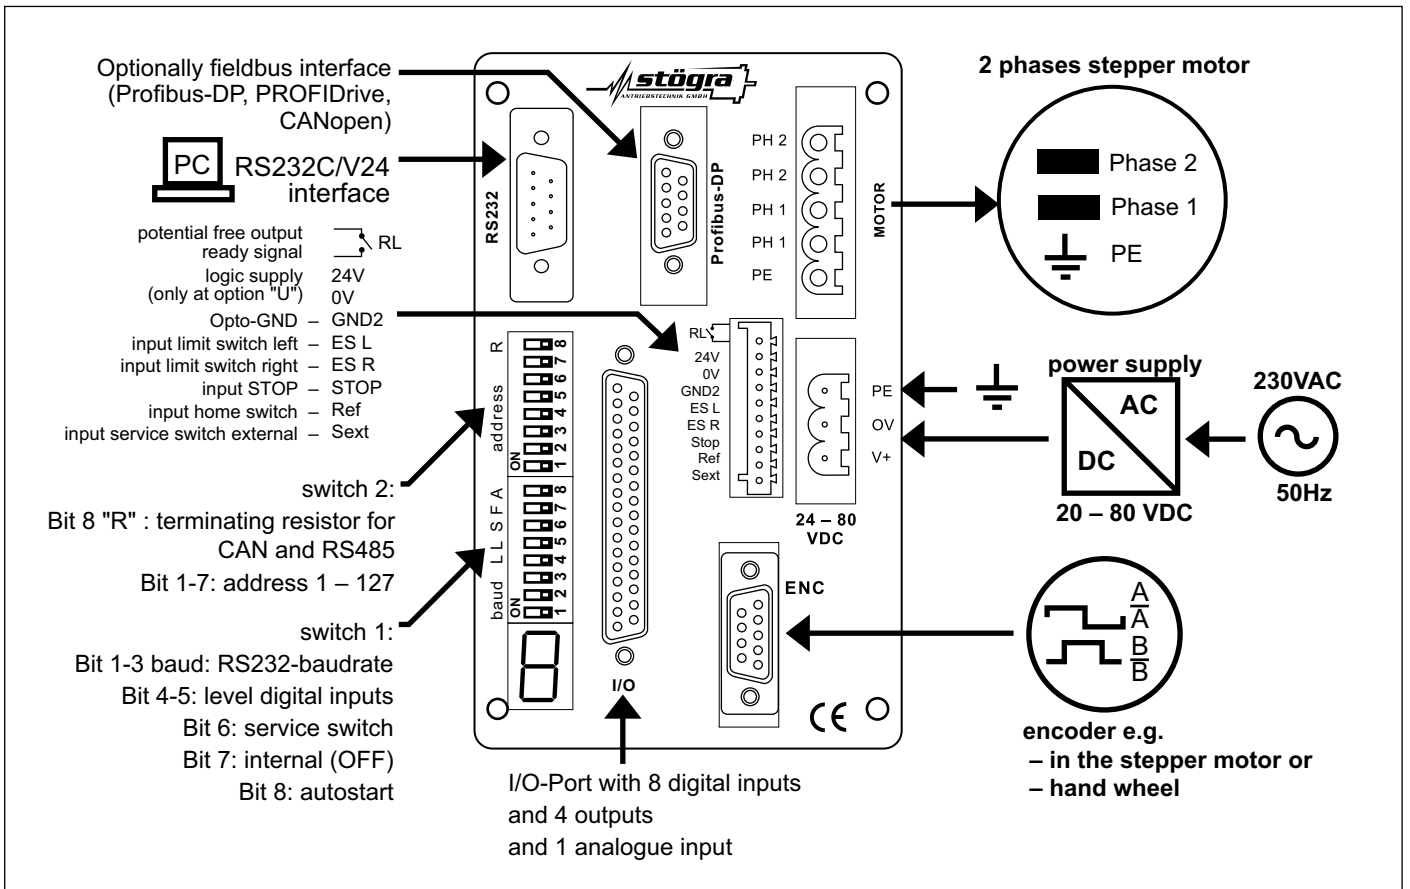


## WSERS 04.230AC and WSERS 06.230AC

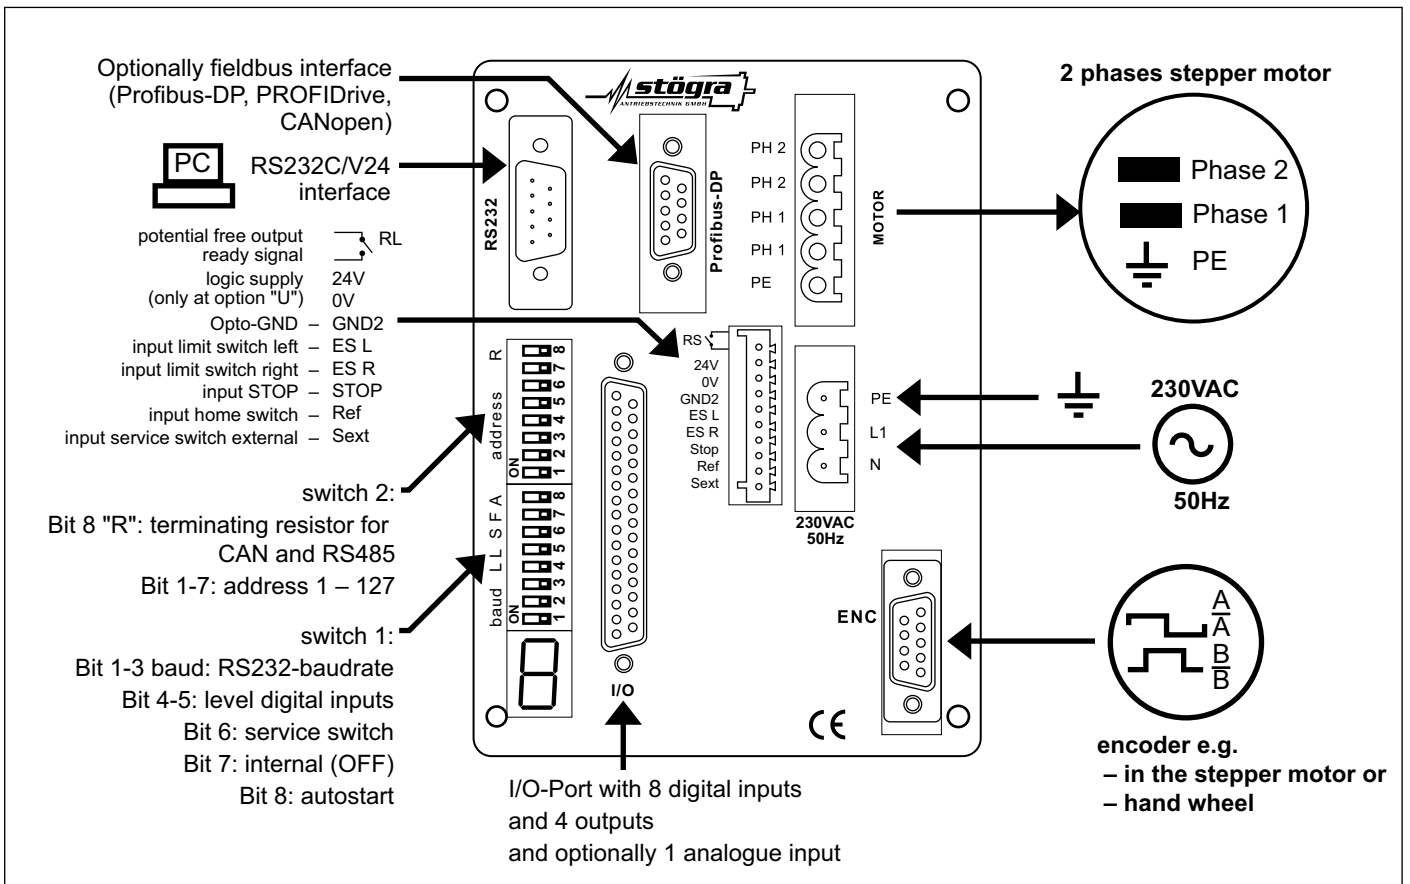

# WSERS – dimensions, ordering key, specifications, equipment 35

## dimensions

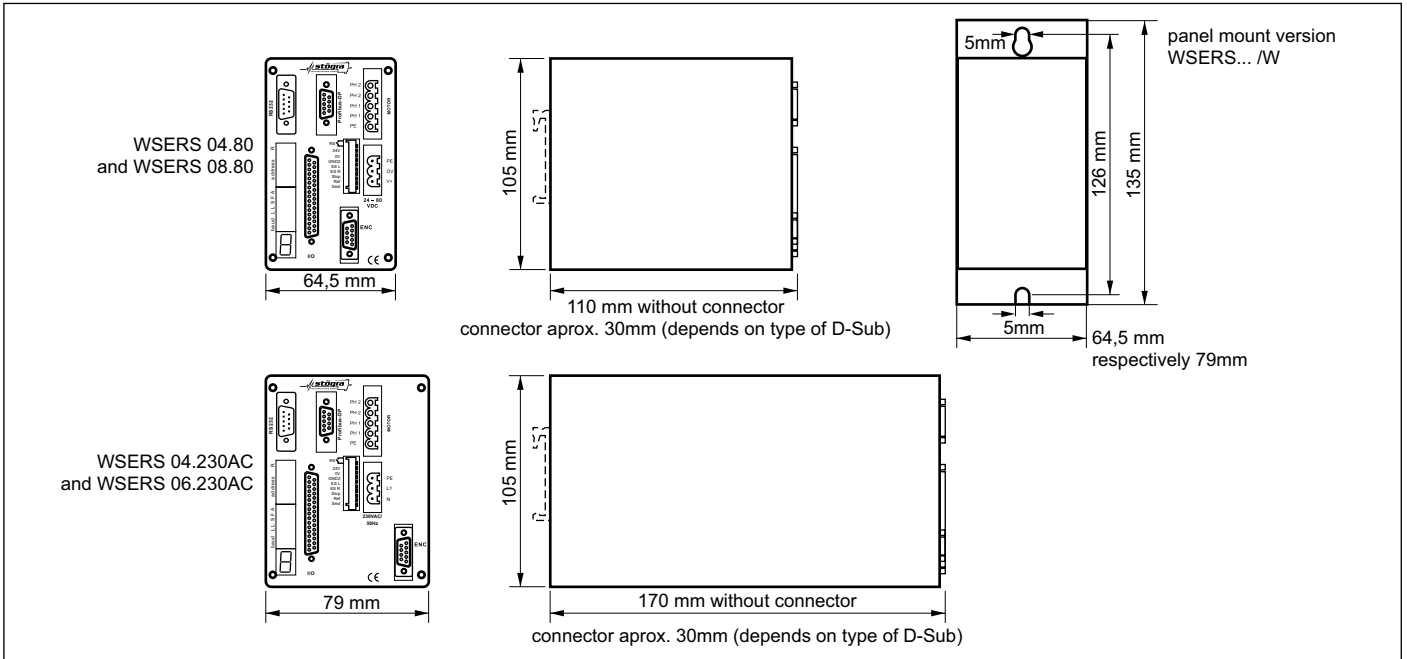

**ordering key** (e.g. WSERS 04.80 V01, WSERS 06.230AC V01 E50 PB-DP U, or WSERS 04.230AC V01 PD W)

**WSERS** [ ] **V01** [E50] [ ] [P8] [U] [A] [ ]

04.80	08.80	06.115AC	04.230AC	06.230AC		
nominal phase current [A/Ph] ▪ nominal voltage supply [VDC] respectively [VAC]						for DIN rail mounting
Option encoder input E50						or panel mounting
						Analogue input ADC <sup>1)</sup>
						seperated 24V logic supply
						8 KByte E <sup>2</sup> Prom memory
RS232	RS485	Profibus DP	PROFIdrive	CANopen		
empty	RS485	PB-DP	PD	CAN		

<sup>1)</sup>The analogue input ADC is optionally for the WSERS xx.115AC and WSERS xx.230AC. For the WSERS xx.80 the ADC is standard and an indication of "A" is not necessary.

## specifications WSERS

<b>protection of device</b>	<ul style="list-style-type: none"> <li>protection class SERS IP00 (ELK: IP20), and WSERS IP20</li> <li>protection against short circuit (motor phases), over temperature (SERS / WSERS) and under voltage</li> </ul>			
<b>weight</b>	SERS 01 / 02 / 03	SERS 06 / 12	WSERS xx.80	WSERS xx.230AC
	0,30 kg	0,60 kg	0,65 kg	1,05 kg
<b>ambient conditions</b>	<ul style="list-style-type: none"> <li>ambient temperature: 0°C to 50°C</li> <li>forced draft: for SERS necessary from 12A adjusted phase current, for WSERS 06.230AC from 6A</li> </ul>			
<b>noise immunity</b>	if correct installed according to EN 50082-2			
<b>noise radiation</b>	if correct installed and shielded lines according to EN 55011 Klasse B			
RoHs conformdirective to 2002/95/EC				

## equipment for SERS position controls



**Screw terminal block** for DIN rail mounting with 25-pole D-Sub-connector for easy connection of SERS / WSERS input-/output signals via screw terminals  
 Ordering key: **KBDS25**

**Cabel** (2m) with 25-pole D-Sub connector for connecting the I/Os of a SERS / WSERS with a screw terminal block KBDS25.  
 Ordering key: **LDS25**



**Cabel** (2m) with 9-pole D-Sub connector and 1:1 wiring for the connection of the RS232-interface of a SERS / WSERS to a control (e.g. PC) with RS232-interface.  
 Ordering key: **LDS9**